

SPT®



 
SL-824T5
T-5 Fluorescent Task Lamp

Thank you for your purchase, please read all instructions before using. Please keep this instruction manual in a safe place for future reference.

Ver.01 DRH-R-84-12



LAMP INSTALLATION

When table or surface thickness is less than 2 cm, please use the insole to increase stability.

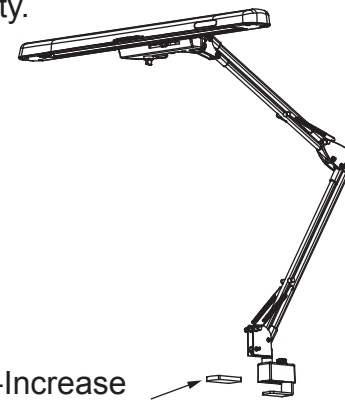

Add the Height-Increase Insole when surface thickness is less than 2cm.

  Do not install lamp:

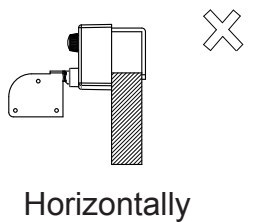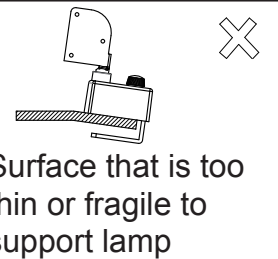

SPT®

Your Guarantee

If this product is found to be faulty as a result of faulty materials or workmanship within one year from date of purchase, it will be repaired free of charge.

This guarantee is subject to the following terms:

- Sunpentown must be notified of the fault.
- Proof of purchase must be presented to Sunpentown's nominated representative.
- The warranty will be void if the product is modified, misused or repaired by an unauthorized person.
- The warranty after repair will not be extended beyond the original one-year period.
- All replacement parts will be new or reconditioned.
- Parts, which are replaced, become the property of Sunpentown.
- The warranty applies for the use of the product in the USA only.

What is NOT COVERED:

- Warranty does not include freight charges.
- Incidental or consequential damage caused by possible defects with this product.
- Damage to product caused by improper power supply voltage, accident, fire, floods or acts of nature.
- Failure of product resulting from unauthorized modifications to the product.
- Improper installation or failure to perform the necessary maintenance.

This GUARANTEE is in addition to your Statutory Rights

 
SUNPENTOWN INTERNATIONAL INC.
14625 Clark Ave. City of Industry, CA 91745

Tel: 800-330-0388

service@sunpentown.com

www.sunpentown.com


PARTS IDENTIFICATION

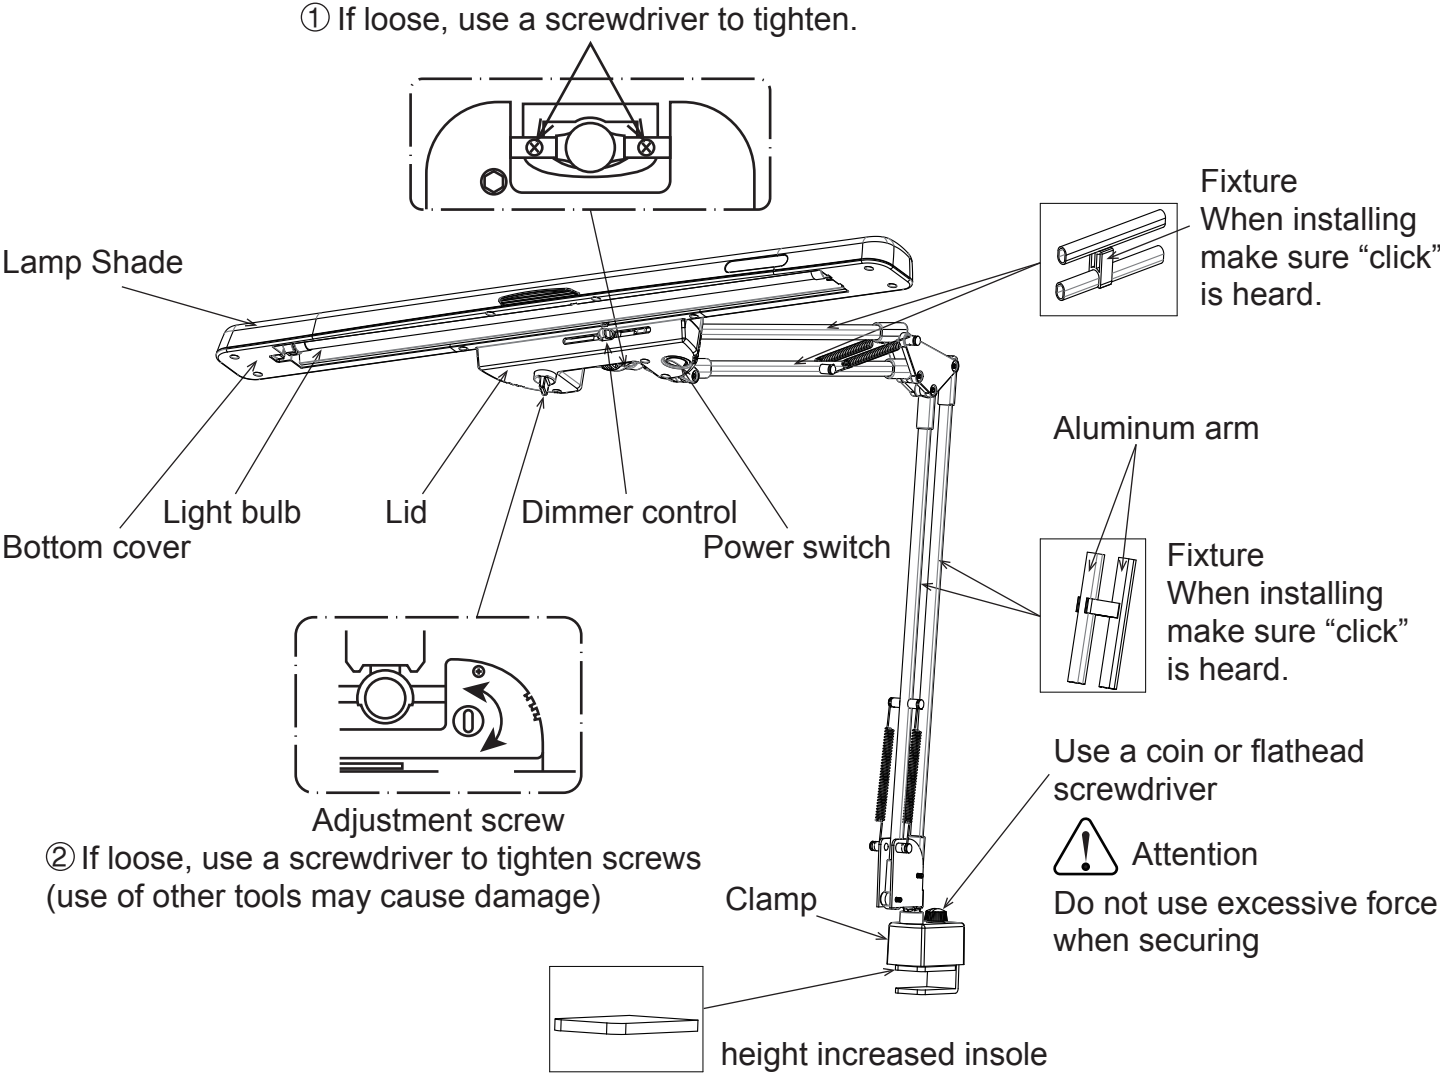

BULB INSTALLATION / REPLACEMENT INSTRUCTIONS

Make sure lamp is powered off and unplugged from power source. Wait until bulb is cool enough to handle. Bulb is hot immediately after powering off.

 - **Removal**
 1. Turn bulb 90 degrees and remove from socket .
- **Installation**
 1. Align base of bulb to notch on the socket. Turn bulb until a “click” is heard.

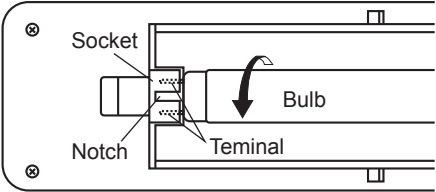


Note: Handle with care, do not drop.
Do not replace anything other than the bulb.
Only replace with HO-24W bulb

SPECIFICATIONS

Model	SL-824 T5
Power Consumption	24W
Power Supply	120V / 60Hz
Dimension	Approx. 22.4x27.56x19.67 (in)
Weight	3.17 lbs
Replacement Bulb	HO-27W

 IMPORTANT SAFEGUARDS

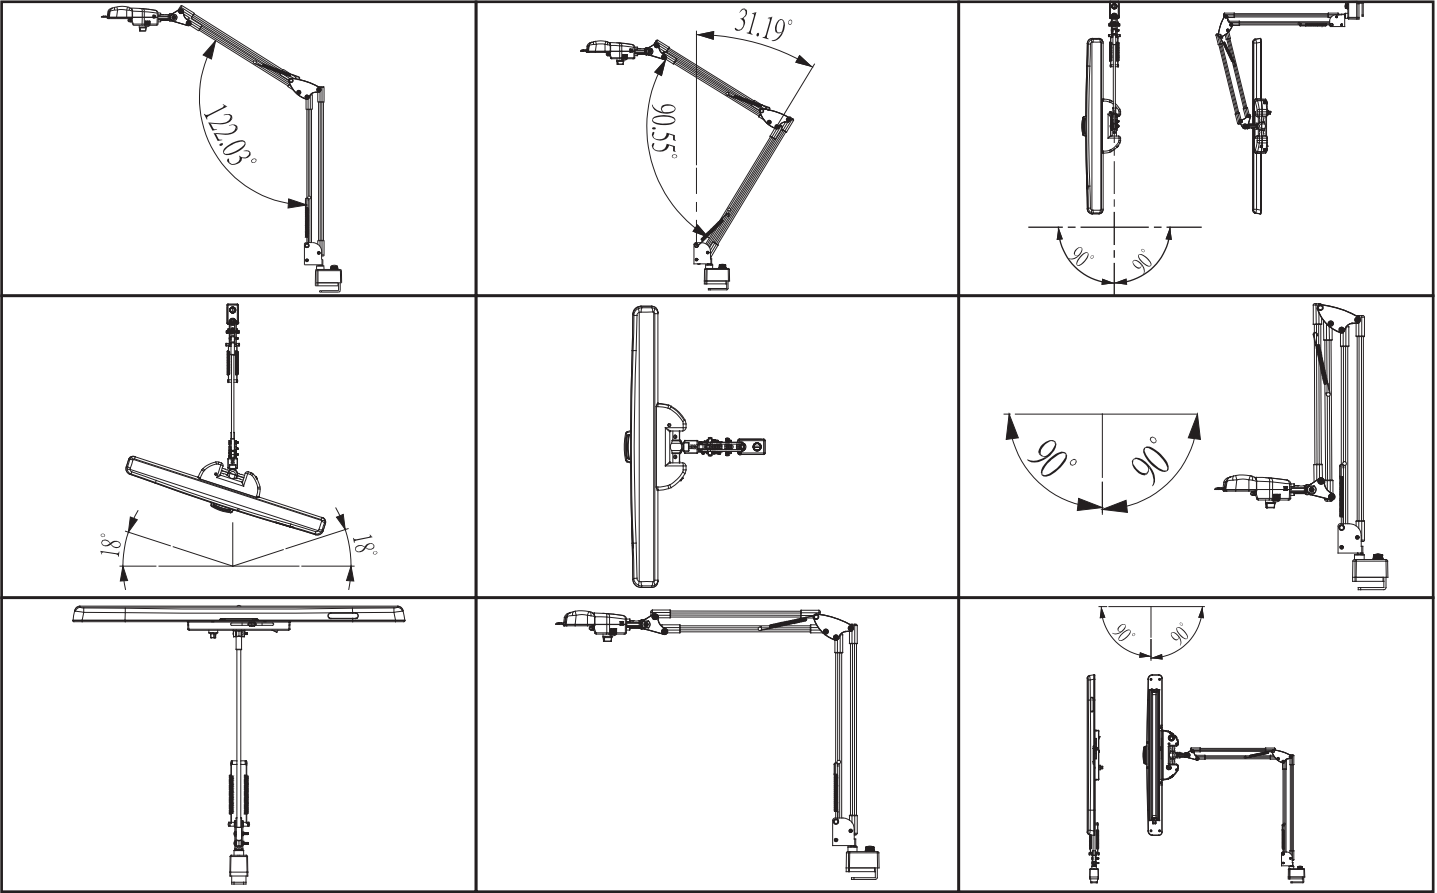

IMPORTANT SAFEGUARDS

- Do not operate this lamp near a water source to avoid electric shock.
- Do not dismantle.
- Do not use with power supply other than 120V~60Hz.
- Do not operate lamp in close proximity to flammable or combustibile vapors, such as aerosol spray, or where oxygen is being administered.
- Do not cut or shorten the power cord.
- Always unplug lamp before performing bulb installation, bulb replacement or maintenance.
- This product may cause interference with radios, cordless telephones or devices that use a wireless remote control, such as televisions. If interference occurs, move the product away from the device, plug the device or lamp in a different outlet or move the lamp out of the line of the remote control receiver.
- Unplug the lamp during lightning storms or when unused for extended period of time.
- All moisture should be properly wiped away and dried prior to use.
- Do not touch bulb when lamp is on or shortly after powering off. May cause burns.
- Dispose of bulbs per local regulations.

MAINTENANCE

- Before cleaning, make sure lamp is powered off and unplugged. Allow sufficient time for the bulb to cool down.
- Periodically wipe the lamp with a soft damp cloth. Use a mild non-abrasive cleaner if needed.
- All liquid should be properly wiped away and dried prior to restoring power.
- Do not use solvents or abrasive cleaners.